

DISH HD Quick Start Guide

Press this button for SAT Mode

Input

Press once for Input.
Press and hold for Recover

DishHD STB Menu

Accesses features and settings

Volume and Mute Buttons

Controls TV volume
Programming required

Themes

Searches for programs using Themes

Recall

Returns to the last channel viewed

Info

Retrieves information on programs

Digital Video Recorder (DVR) Buttons

Pauses live TV and play or record programming (Feature may not be available depending on your STB)

Format

Formats the picture to the desired width to match the program you are viewing

DishHD 211t Power

Turns the DishHD 211t on/off

TV Power

Turns the TV on/off Programming required

Page Buttons

Pages up/down in menus

Program Guide

Displays current and future satellite program listings

Browse

Views what is on other channels while watching TV

Arrows/Select Buttons

Channels up/down, navigates through menus, and selects a desired option

View Live TV

(Satellite Programming)
Exits from of any menu/guide and returns to viewing your satellite programming

Number Buttons

Enters a channel number, or navigates through menus

Alt Audio

Changes to another available language (audio stream), where supported



Easy Ways to Find a Program

GUIDE Select a program from the Program Guide

TIP: Press the GUIDE button once to open the Program Guide or repeatedly to change among your Favorites Lists.

Channel Up/Down one program at a time



Enter a channel number

Tip: To skip ahead 24 hours in the Program Guide, press the SKIP FWD button. To back up 24 hours, press the SKIP BACK button.




Tip: While viewing a program, press the BROWSE (RIGHT ARROW) button. Then press either the UP or DOWN ARROW. The information on other channels appears in the Browse Banner. Press SELECT to watch the program.

Formatting Your TV Screen

FORMAT Press the FORMAT button on your remote to change your picture's sizing to your preference. See your HDTV user's guide for formatting options available on your HDTV.



Watching Your Satellite Programming

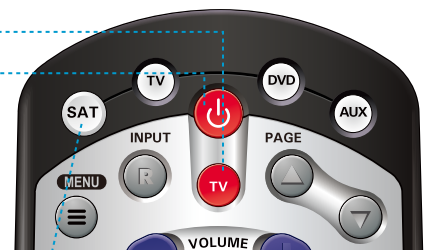


SAT You must be in SAT mode to operate your DishHD STB. Press the SAT button to enter SAT mode

Power Turns the DishHD STB On or Off

TV Turns the TV On or Off

DISH HD Quick Start Guide

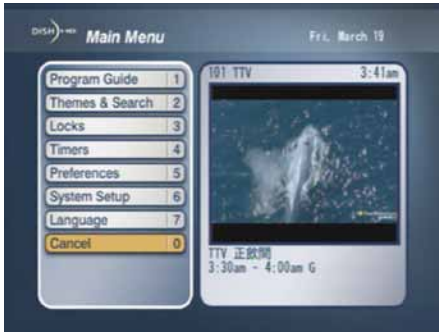


Main Menu without External Hard Drive attached.



Main Menu with External Hard Drive attached.

Use the **INPUT** button to return to watching satellite programming if you accidentally change channels or inputs on your TV

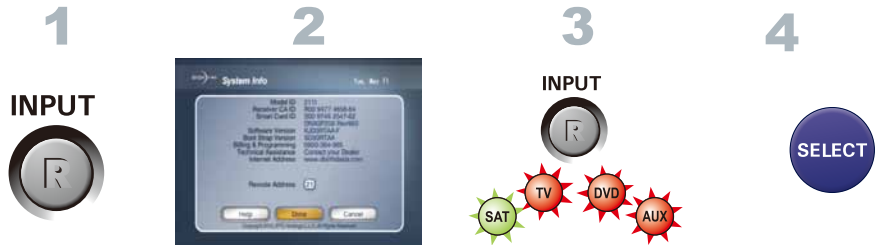

1
INPUT
Press and hold INPUT until all mode buttons light up.

2
If you see the System Info screen, proceed to step 4. Otherwise, continue to step 3.


3
INPUT
Press INPUT again and wait until the Mode lights stop flashing. If you see the System Info screen, go to step 4. If not, press INPUT again.

4
SELECT
Press SELECT to end the procedure and return to satellite programming.

Programming Limited Mode

Limited Mode locks out all TV mode operations except TV power, Mute, and Volume, preventing you from accidentally tuning away from satellite programming.

To undo, repeat using the PAGE DOWN button instead of PAGE UP.

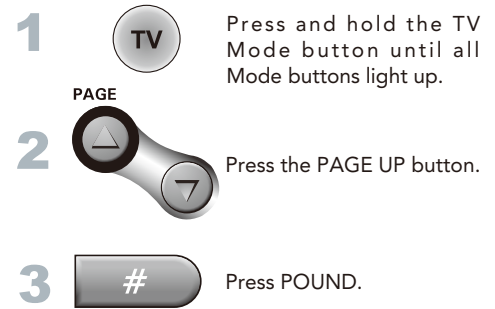

Digital Video Recorder (DVR) Functions

GUIDE




Highlight a future program in the Guide, press the SELECT button, and choose your recording options from the menu.

Go to list of recorded programs

Skip back 10 seconds

Reverse at 4 different speeds

Stop playback or recording

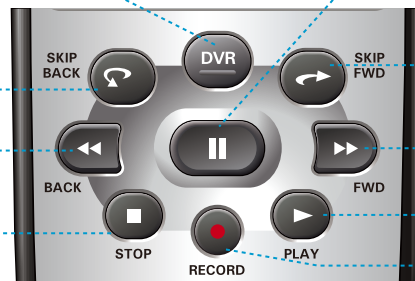

Pause live TV or recorded program

Skip forward 30 seconds

Fast forward at 4 different speeds

Starts playback

Record a program

RECORD Tip: To record a program that is currently playing, press the RECORD button and follow the on-screen instructions.

DVR Tip: Press the DVR button twice to quickly access your recorded programs.

DVR Tip: To quickly access your DVR timer schedule, press the DVR button three times.

Power Tip: The DVR still records your programs when the DishHD STB is powered off.